

## Directions for Setting Price on VR-10/4 Computers

### From \$0.000 to \$0.999 (1/10¢ Price Increment)

- 1) Set price wheels by positioning and fully engaging range arms. (see Figure 1).
- 2) Move dollar shift lever to "central" position. (see Figure 2).
- 3) Set price range shift lever in the "H" or "1" position. (see Figure 3).
- 4) Dollar drive shaft vertical pin stays in place. (see Figure 4).
- 5) Color coded idler gears not engaged. (see Figure 5).
- 6) Dollar price wheel should be in "blank" position. If not, remove cotter pin, lift wheel, turn into position, lower wheel, replace cotter pin.

### From \$1.000 to \$1.999 (1/10¢ Price Increment)

- 1) Set price wheels by positioning and fully engaging range arms. (see Figure 1).
- 2) Move dollar shift lever to "100" position. (see Figure 2).
- 3) Set price range shift lever in the "H" or "1" position. (see Figure 3).
- 4) Dollar drive shaft vertical pin stays in place. (see Figure 4).
- 5) Color coded idler gears not engaged. (see Figure 5).
- 6) Dollar price wheel should be in "1" position. If not, remove cotter pin, lift wheel, turn into position, lower wheel, replace cotter pin.

### From \$2.000 to \$2.999 (1/10¢ Price Increment)

- 1) Set price wheels by positioning and fully engaging range arms. (see Figure 1).
- 2) Move dollar shift lever to "200" position. (see Figure 2).
- 3) Set price range shift lever in the "H" or "1" position. (see Figure 3).
- 4) Dollar drive shaft vertical pin stays in place. (see Figure 4).
- 5) Color coded idler gears not engaged. (see Figure 5).
- 6) Dollar price wheel should be in "2" position. If not, remove cotter pin, lift wheel, turn into position, lower wheel, replace cotter pin.

### From \$3.000 to \$3.999 (1/10¢ Price Increment)

- 1) Set price wheels by positioning and fully engaging range arms. (see Figure 1).
- 2) Move dollar shift lever to "200" position. (see Figure 2).
- 3) Set price range shift lever in the "H" OR "1" position. (see Figure 3).
- 4) Remove dollar drive shaft vertical pin. (see Figure 4 on page 2 & photos on page 3).
- 5) White color coded gear engaged. (see Figure 6).

Detail: Remove cotter pin. Remove gear group. Remove washer. Remove black and red gears. Install black gear upside down on white gear. Install red gear on black gear. Install gear group on shaft. Install washer. Install cotter pin.

- 6) Move dollar price wheel to "3" position.

Detail: Remove cotter pin, lift wheel, turn into position, lower wheel, replace cotter pin.



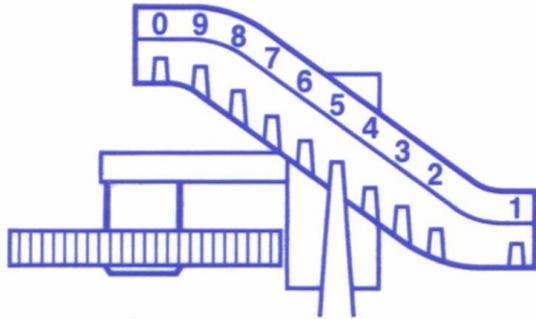


FIGURE 1

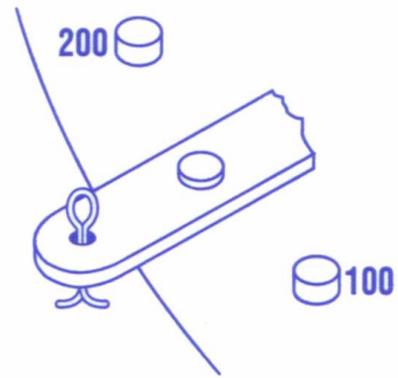


FIGURE 2

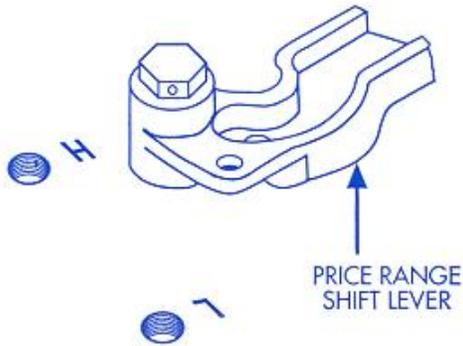


FIGURE 3


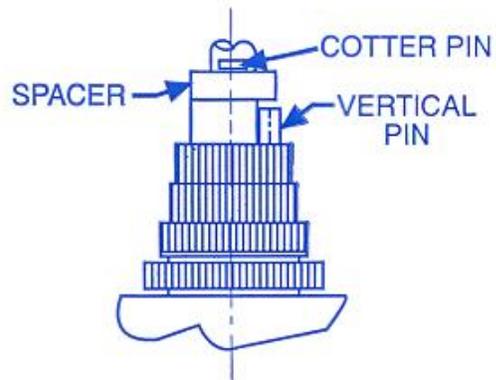


FIGURE 4



All product or company's names, trade names, trademarks, parts numbers and part descriptions may be the trademarks of their respective owners, and are used for reference or identification purposes only. PMP does not claim any right to or affiliation with such owners. The PMP product described here is manufactured or remanufactured and sold by PMP and is not the product of any other identified manufacturer.

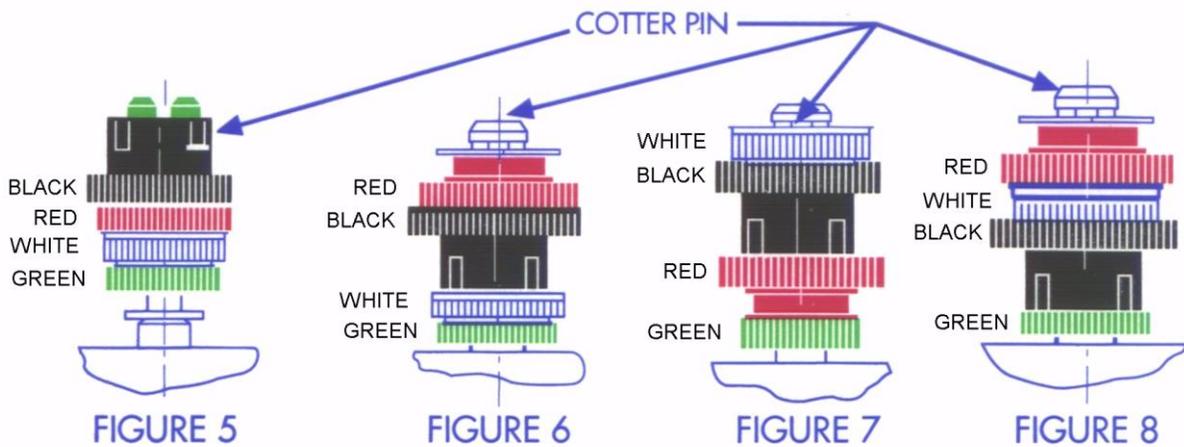

**PMP CORPORATION**  
 P.O. Box 422 • 25 Security Drive  
 Avon, CT 06001

Local: 860-677-9656  
 Toll Free: 800-243-6628  
 Toll Free Fax: 888-674-0196  
 Web: [www.pmp-corp.com](http://www.pmp-corp.com)  
 E-mail: [sales@pmp-corp.com](mailto:sales@pmp-corp.com)



© PMP CORP

A Veteran Owned and Managed Company