



# Model 918AC System Interface

SPECIFICATION SHEET

## Application

The 918AC System Interface is an AC-powered console designed to monitor 1 to 4 simple input switch devices and provide both audible and visual indication when an input switch is activated. In addition, the 918AC has the optional capability to add 1 to 4 configurable relay outputs to interface with remote audible and visual indicators or other external simple switch-activated devices.

## Expandability with Plug-n-Play Capabilities

- Intrinsically safe input modules expandable up to 4 input channels
- Electromechanical output modules expandable up to 4 output relays
- Input and output modules can be purchased separately


## Configurability

- Audible alarm ON/OFF selectable by channel
- Auto silence ON/OFF selectable by channel
- Normally open (NO) or normally closed (NC) selectable on input and output
- Output relay activation selectable to one or more input channels
- Fail safe mode selectable to indicate power outage at console
- Change lens color: red (standard), amber, or green

## Approvals

UL/cUL 913 Listing for Ordinary Location with Hazardous Location Intrinsically Safe Input Circuits for Class I, Div I, Group D.


Florida DEP EQ-834

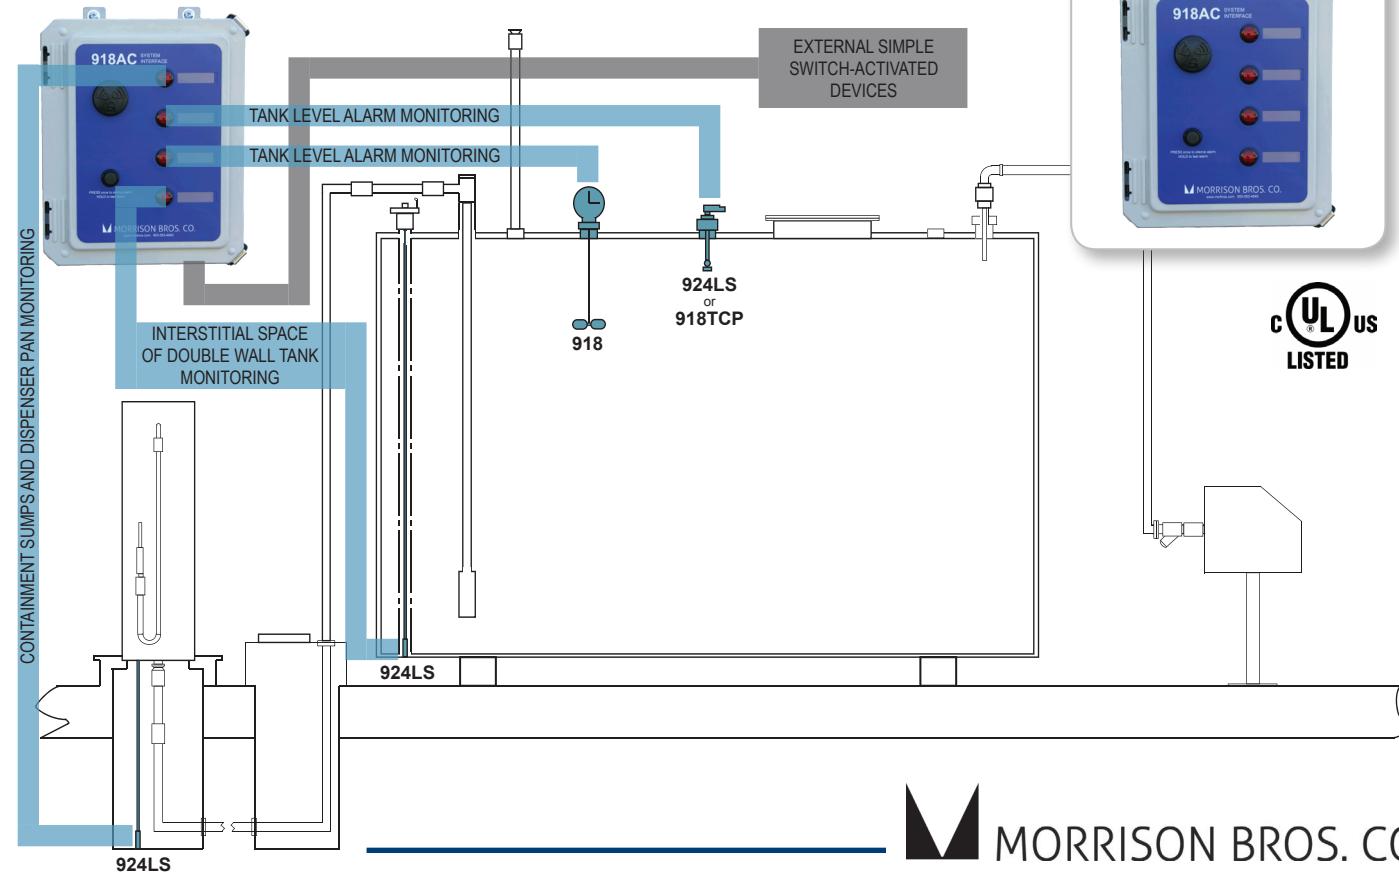

MORRISON BROS. CO.



## One Standard Size Enclosure for All Configurations

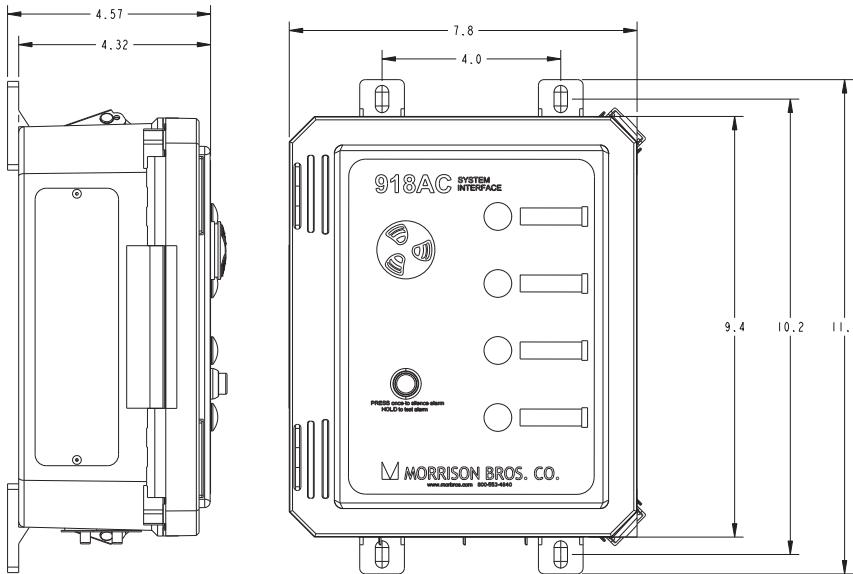

- ◆ **Power Requirements:** 100-240 VAC, +/-10%, 50/60 Hz
- ◆ **Input Sensors:** simple switch devices
- ◆ **Output Relays:** dry switch contact, form C SPDT, rated up to 5 AMPS at 240 VAC
- ◆ **Enclosure:** NEMA 4X indoor/outdoor weather protected lockable box (non-hazardous location only)
- ◆ **Audible horn:** 95 dBA at 2 feet
- ◆ **Operating temperature:** -40°F to 140°F

| Item Number    | Description  | Inputs | Outputs | Weight (lbs) |
|----------------|--|--------|---------|--------------|
| 918AC-1000 AI  | System interface console                           | 1      | 0       | 6.0          |
| 918AC-1100 AI  | System interface console                           | 1      | 1       | 6.0          |
| 918AC-1200 AI  | System interface console                           | 1      | 2       | 6.0          |
| 918AC-1300 AI  | System interface console                           | 1      | 3       | 6.0          |
| 918AC-1400 AI  | System interface console                           | 1      | 4       | 6.0          |
| 918AC-2000 AI  | System interface console                           | 2      | 0       | 6.0          |
| 918AC-2100 AI  | System interface console                           | 2      | 1       | 6.0          |
| 918AC-2200 AI  | System interface console                           | 2      | 2       | 6.0          |
| 918AC-2300 AI  | System interface console                           | 2      | 3       | 6.0          |
| 918AC-2400 AI  | System interface console                           | 2      | 4       | 6.0          |
| 918AC-3000 AI  | System interface console                           | 3      | 0       | 6.0          |
| 918AC-3100 AI  | System interface console                           | 3      | 1       | 6.0          |
| 918AC-3200 AI  | System interface console                           | 3      | 2       | 6.0          |
| 918AC-3300 AI  | System interface console                           | 3      | 3       | 6.0          |
| 918AC-3400 AI  | System interface console                           | 3      | 4       | 6.0          |
| 918AC-4000 AI  | System interface console                           | 4      | 0       | 6.0          |
| 918AC-4100 AI  | System interface console                           | 4      | 1       | 6.0          |
| 918AC-4200 AI  | System interface console                           | 4      | 2       | 6.0          |
| 918AC-4300 AI  | System interface console                           | 4      | 3       | 6.0          |
| 918AC-4400 AI  | System interface console                           | 4      | 4       | 6.0          |
| 918AC-0156 2L  | Remote strobe; 120 Volt AC                         | N/A    | N/A     |              |
| 918AC-0154 AH  | Remote horn and box kit; 120 Volt AC               | N/A    | N/A     |              |
| 918AC-0157 AHS | Remote horn, box and strobe light kit; 120 Volt AC | N/A    | N/A     |              |

## Output Accessories



Remote Strobe



Remote Horn



Remote Horn with Strobe

